


INSTRUCTIONS

Tumble dryer ProLine T 201 E

1. Fill the tumble dryer

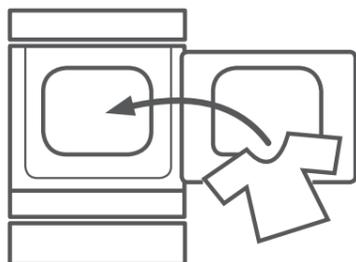

2. Select program



Change program with P-button.

3. Start program



Push start/stop button.


4. Cancel program



Push P-button. Let the dryer cool down before opening the door.

5. Clean the filter

Remember to clean the lint filter after usage.

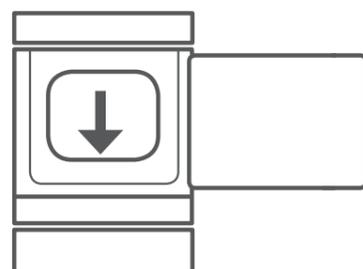

Button

Automatic programs

The laundry is dried to selected level of dryness. Program stops automatically.



IRON DRY

For laundry to be ironed.



SLIGHTLY DRY

For laundry that will not be ironed or only lightly ironed.



CABINET DRY

For laundry that will not be ironed.



EXTRA DRY

For particularly thick or multilayered fabrics.

Select drying time manually



TIMED DRYING

For particularly thick or multilayered fabrics.



Increases time period by 5 min/push.

Additional functions



GENTLE DRYING

For sensible textiles. The temperature is reduced.



Fast forward to cool down phase.