


INSTRUCTIONS

Drying cabinet ProLine TS 63 VP

1. Select program

 Change program with P-button.

2. Start/Cancel

 Push start/stop button. Open doors to pause.
The drying process will keep on going for 1 minute before it stops.

Automatic programs

The laundry is dried to selected level of dryness. Programs stop automatically.



IRON DRY

For laundry to be ironed or mangled.



SLIGHTLY DRY

For laundry that will not be ironed or only lightly ironed.



CABINET DRY

For laundry that will not be ironed.



EXTRA DRY

For particularly thick fabrics.

Select drying time manually



TIMED DRYING

The drying cabinet stops after chosen drying time.



Increases the time by 5 min/push.

For best drying results

- Let the program finish without interruption.
- Do not hang wet fabrics in the cabinet during the drying process.
- Control the lint filter after use and clean when necessary.