 


INSTRUCTIONS

 
Drying cabinet TS 4 VP

1. Hang the laundry

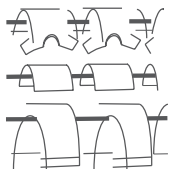

Hang the laundry evenly on the hangers. Do not hang the laundry too tight, it prolongs the drying time. Avoid blocking the holes in the shoe rack. The door should not be opened during the drying process.

2. Choose program

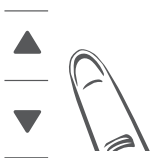

Extra Dry Used to dry thicker garments.

Normal Dry Used to dry normal garments.

Note: Heat pump technology works with low temperatures.

 
3. Start/stop



The Start/Stop button is used to start and stop the drying process.


Note: The drying process stops automatically when the laundry is dry.

Clean lint filter

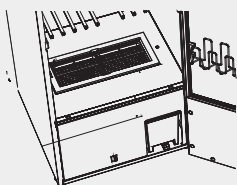


Remove lint on lint filter after drying. Empty the condensate water tank and make sure to push in the tank properly when reassembled.

 
Error



 
If the display shows an alarm ex. ERR 4, first try to reset the alarm by pressing and holding the Start/Stop button for 5 seconds. If the error message still remains, please call a service technician.

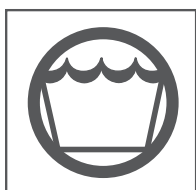

 Drying cabinet is only intended for textiles washed in water

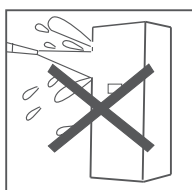

Must not be flushed with water

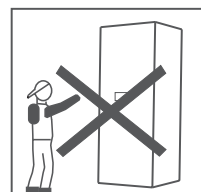 

Must not be used by minors