

Tumble dryer T201 E



1. Fill the tumble dryer

Load with laundry and close the door properly.

2. Select program



Change program with P-button.

3. Start program



Push start/stop button.


4. Cancel program



Press the P-button.

If possible, let the program finish before opening the door. If the program needs to be interrupted, use the P-button and allow the cooling to complete. The drum can be very hot if the door is opened during operation.

5. Clean the filter

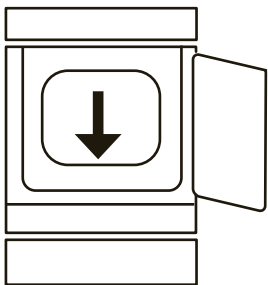

Remember to clean the lint filter after usage.

Button	Automatic programs	
	1	IRON DRY For laundry that will be ironed or mangled.
	2	SLIGHTLY DRY For laundry that should not be ironed or only lightly ironed.
	3	CABINET DRY For laundry that will not be ironed.
	4	EXTRA DRY For particularly thick or multilayered fabrics.
Select drying time manually		
	TIMED DRYING The dryer stops after the selected drying time. Increases time period by 5 min/push.	
Additional functions		
	GENTLE DRYING For sensible textiles. The temperature is reduced.	
	Fast forward to cool down phase.	