


Drying cabinet TS43 E



1. Hang the laundry

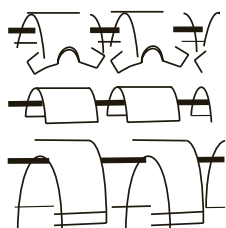

Distribute the laundry evenly on the hangers. Do not hang the laundry too closely together, as this will extend the drying time. Do not open the door during the drying process.

2. Start the cabinet



Press the ON/OFF button.

3. Select a program



Choose an **automatic program** by pressing the AUTO button. Scroll to the desired program by pressing the button once or several times.



 
Optional setting for AUTO HIGH and AUTO LOW programs.



Option available only for the AUTO HIGH program.



To choose a manual program, press the MAN button. Press repeatedly to scroll through the programs.



The preset drying time can be increased or decreased using the button.

4. Start the program



Press the Start/Stop button to start or stop the drying cabinet. When the LED is steadily lit, the drying process is active.

Automatic programs	Drying temperature (°C)
AUTO ECO+	Room temperature
AUTO LOW	45
AUTO LOW EXTRA DRY	45
AUTO HIGH	70
AUTO HIGH EXTRA DRY	70
AUTO HIGH ECO	70
Manual programs	Drying temperature (°C)
MAN ECO+	Room temperature
MAN LOW	45
MAN HIGH	70