


Washing machine HX/NX



1. Load the machine and close the door

2. Add detergent

- I Prewash
- II Main wash (powder)
- III Main wash (liquid)
- * Fabric softener

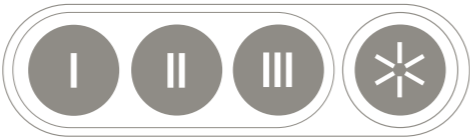

3. Select program and options

Without prewash

Select program using the arrows ▲ ▼
or
Select quick start program

40

60

Snabbtvätt °C

With prewash

Select program using the arrows ▼ ▲
Press

OK

Press

F

Undo selection

To return to the start screen, press

←

4. Start

To start the selected wash program, press

I

5. Cancel/Quick feed

Quick feed the program by pressing the start button repeatedly

I

Button	Program		Approx. Time (min)
▲ ▼	1	30° Quick Wash	19
	2	40° Quick Wash	28
	3	60° Quick Wash	33
	4	30° Normal Wash	34
	5	40° Normal Wash	41
	6	60° Normal Wash	48
	7	90° Normal Wash	61
	8	25° Hand Wash	17
	9	40° Sportswear	33
	10	40° Shirts	24
	11	30° Wool	22
	12	Spin	9
	13	Machine Cleaning	27
Quick Start – The machine starts immediately, no need to press the start button.			
<div>40</div> <div>60</div>	40° Quick Wash		28
	60° Quick Wash		33
Options	Press the <div>OK</div> -button to access option functions.		
<div>F</div>	Prewash – Not available for quick wash		
Other			
<div>i</div>	Info – Review the wash program		