

1. Select program

 Change program with P-button.

2. Start /cancel program

 Push start/stop button. Open doors to pause.

Automatic programs

The laundry is dried to the selected humidity level and shuts off automatically



IRON DRY

For laundry to be ironed.



SLIGHTLY DRY

For laundry that will not be ironed or only lightly ironed



CABINET DRY

For laundry that will not be ironed.



EXTRA DRY

For particularly thick fabrics.

Set drying time manually



TIMED DRYING

The drying cabinet stops after chosen drying time.



Increases the time by 5 min/push.

Tips for optimal drying results

- Let the program finish without interruption.
- Do not hang wet fabrics in the cabinet during the drying process.
- Control the lint filter after use and clean when necessary.